

DYNAMIC DASHBOARD III
Recovery Tool Guide


How to Use the Recovery Tool

Please follow the steps below to update the DYNAMIC DASHBOARD III.


Important

If your device is working properly, please do not update the firmware.


1. Discharge before turning on
   A. Flip the power switch to the **O** position.
   B. Unplug the power cord from the power supply unit.

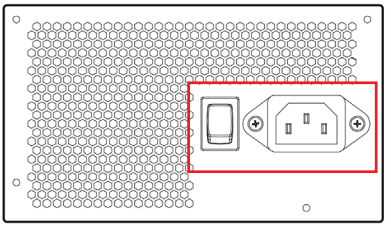


   C. Press and hold the CLEAR CMOS button for 3 seconds and wait for 3 minutes, or use a jumper cap to short the JBAT1 pins for 3 minutes and then remove the jumper cap.

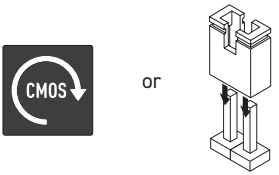


   D. Plug in the power cord and flip the power switch to the I position.
2. Boot into Windows 10 / Windows 11 operating system.
3. Download DYNAMIC DASHBOARD III Recovery Tool from MSI website at http://msi.com
4. Close all 3rd party software that will read smbus (e.g., CPUID HWMonitor / AIDA64 / HWiNFO).
5. Exit MSI Center from system tray.
6. Unzip XXX_DYNAMIC_DASHBOARD_Tool.zip.
7. Double-Click<RecoverMode.bat>

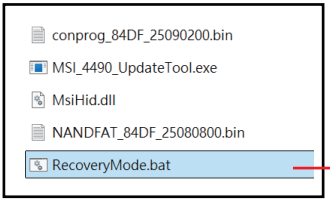


8. Click RecoveryMode button, then click <YES> to enter recovery mode..

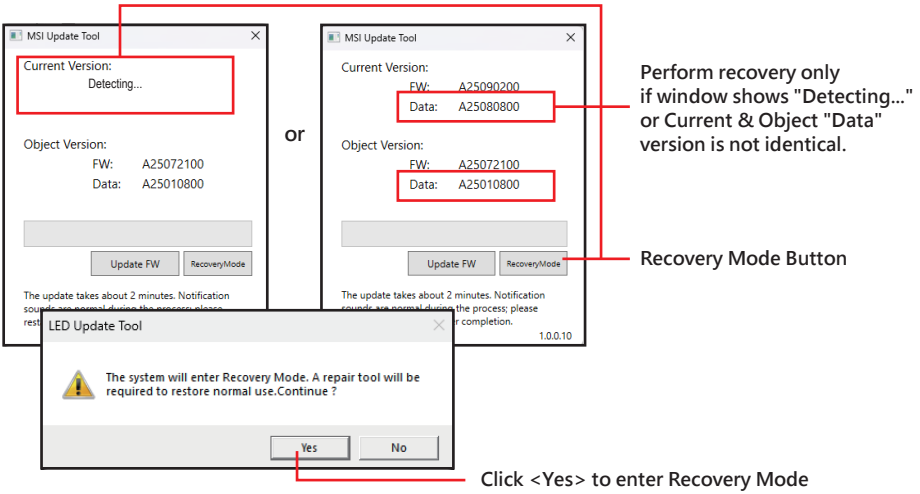

9. Wait for DYNAMIC DASHBOARD device to connect.
Current "Data" version will change to recovery version < Intel: I22010100 ; AMD: A22010100 >. Click Update FW button to start updating the firmware.

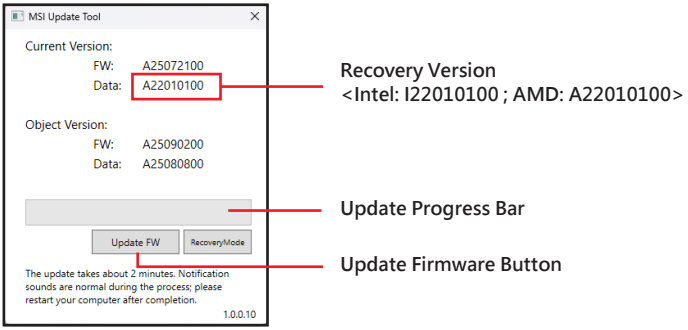


10. The progress bar will show the update status. Do not operate the device or turn off the PC during the update

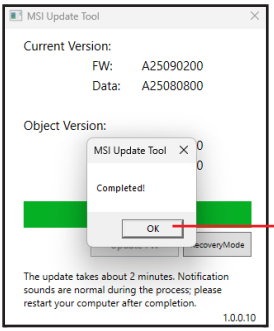


Click <OK> when the update is finished

11. After installation, click the <X> in the top-right corner and choose <Yes> The system will restart automatically to complete the update.

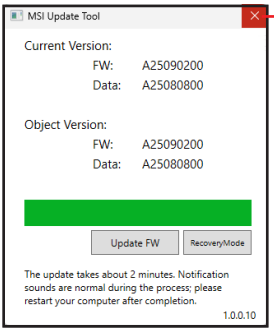

Click the <X> in the top-right corner

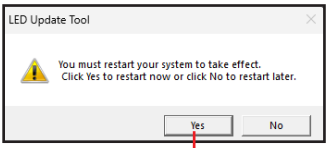

Click <Yes> to restart your computer automatically and finish updating.

Important

During the update, you may hear several "ding-dong" sounds. This is because the system automatically re-detects the EZ BRIDGE device. It is a normal behavior, not an error or malfunction.

- The update takes about 2 minutes.
- The sounds do not indicate errors.
- Do not remove the EZ BRIDGE device or shut down the PC before completion.
- After the update, restart the PC to restore normal use.


如何使用救援工具

請依照下列步驟更新 DYNAMIC DASHBOARD III。

溫馨提示

I如果您的裝置運作正常，請不要更新韌體。


1. 放電操作（Discharge）
   A. 將電源供應器開關切至 O（關閉）
   B. 拔下電源線。

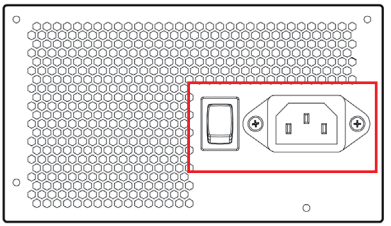


   C. 按住 CLEAR CMOS 按鈕 3 秒，並等待 3 分鐘。或使用 跳線帽（Jumper Cap）短接 JBAT1 接腳 3 分鐘後，再移除跳線帽。



   D. 新插上電源線，並將電源開關切至 I（開啟）。
2. 開機進入 Windows 10 / Windows 11 作業系統。
3. 從 MSI FAE 取得 X870E_DYNAMIC_DASHBOARD_Recovery 工具。
4. 關閉所有會讀取 SMBus 的第三方軟體 (例如: CPUID HWMonitor / AIDA64/ HWiNFO)
5. 從系統工作列退出 MSI Center。
6. 解壓縮 DYNAMIC_DASHBOARD_Recovery.zip。
7. 連續點擊 RecoveryMode.bat。

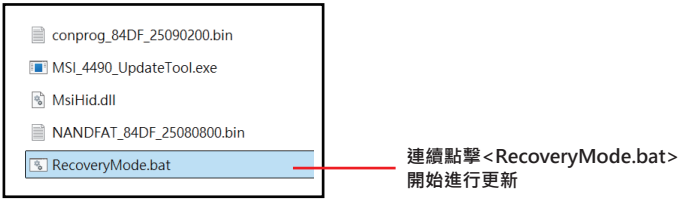


8. 先點擊 RecoveryMode 按鈕，再點擊 YES，即可進入救援模式。

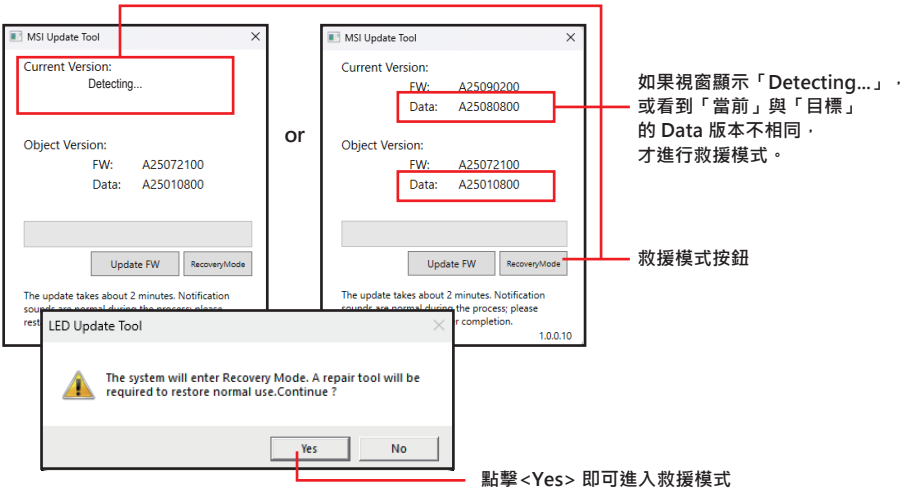


9. 等待 DYNAMIC DASHBOARD 裝置連接，此時 Current Version 將顯示為救援版本 <X22010100>。接著，按下 Update FW 按鈕，即可開始更新韌體。



10. 更新進度條會顯示安裝狀態。更新期間請勿操作裝置或關閉電腦電源。

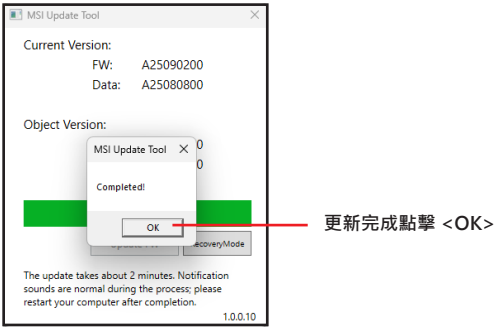

11. 更新完成後，點擊右上角「X」，在視窗選擇「Yes」，系統將自動重啟完成更新。

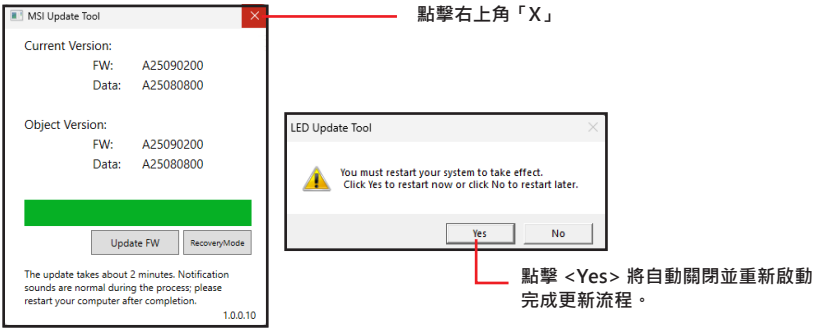

溫馨提示

在韌體更新過程中，電腦可能會出現數次 「叮咚」提示音。這是系統自動重新偵測 EZ BRIDGE 裝置的正常現象，並非錯誤或故障。

- 更新大約需要 2 分鐘。
- 這些提示音 不代表錯誤。
- 更新完成前，請 勿移除 EZ BRIDGE 裝置或關閉電腦。
- 更新完成後，請 重新開機，裝置將恢復正常使用。


如何使用恢复工具

請依照下列步驟更新 DYNAMIC DASHBOARD III。

温馨提示

如果您的设备运行正常，请不要更新固件。


1. 放电操作（Discharge）
   A. 将电源供应器开关切至 O（关闭）
   B. 拔下电源线。

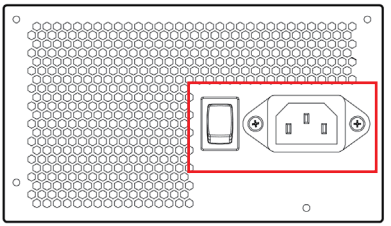


   C. 按住 CLEAR CMOS 按钮 3 秒，并等待 3 分钟。或使用 跳线帽（Jumper Cap）短接 JBAT1 接脚 3 分钟后，再移除跳线帽。




   D. 重新插上电源线，并将电源开关切至 I（开启）。
2. 开机进入 Windows 10 / Windows 11 操作系统。
3. 从 MSI FAE 获取 X870E_DYNAMIC_DASHBOARD_Recovery 工具。
4. 关闭所有会读取 SMBus 的第三方软件 (例如: CPUID HWMonitor / AIDA64/ HWiNFO)
5. 从系统托盘退出 MSI Center。
6. 解压缩 X870E_DYNAMIC_DASHBOARD_Recovery.zip。
7. 双击 RecoveryMode.bat。

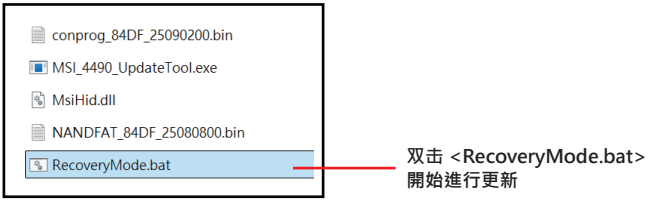


8. 先点击 RecoveryMode 按钮，再点击 YES，即可进入恢复模式。

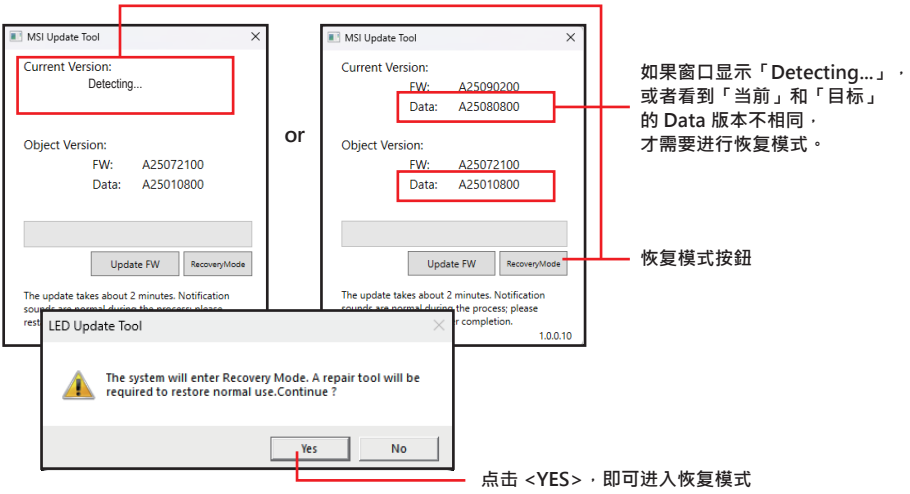


9. 等待 DYNAMIC DASHBOARD 设备连接，此时 Current Version 将显示为恢复版本 <X22010100>。接着，点击 Update FW 按钮，即可开始更新固件。

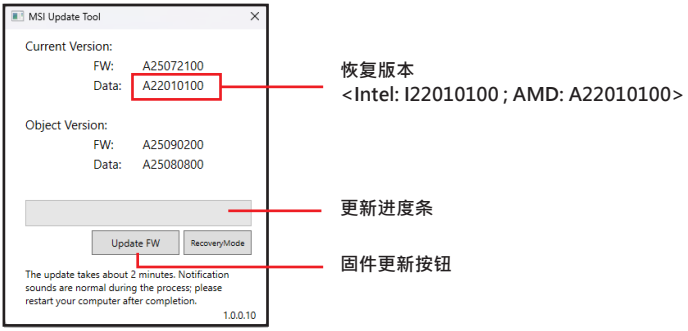

10. 更新进度条会显示安装状态。更新期间请 不要操作设备或关闭电脑电源。

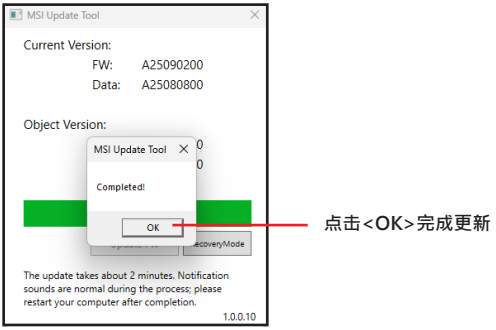

11. 安装完成后，点击右上角<X> ，在窗口选择<Yes> ，系统将自动重启完成更新。

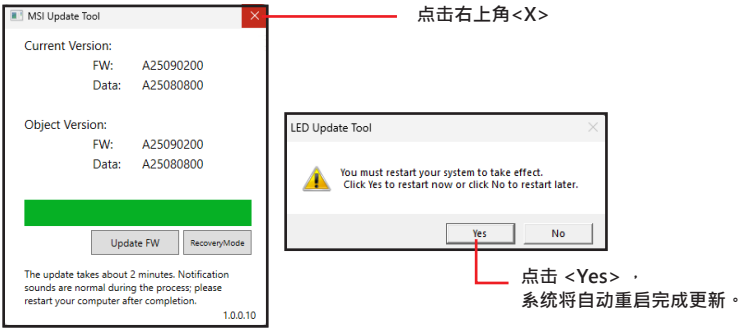

温馨提示

在固件更新过程中，电脑可能会出现数次“叮咚”提示音。这是系统自动重新检测 EZ BRIDGE 设备的正常现象，并非错误或故障。

- 更新大约需要 2 分钟。
- 这些提示音并不代表错误。
- 在更新完成前，请勿移除 EZ BRIDGE 设备或关闭电脑。
- 更新完成后，请重新启动，设备将恢复正常使用。